


Creating a Custom IP core using the IP Integrator

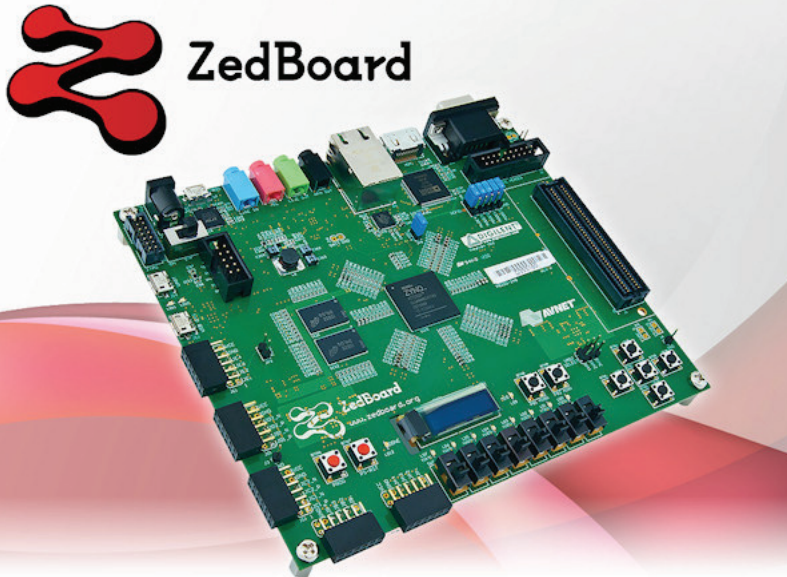

([https://reference.digilentinc.com/_detail/reference/programmable-logic/zedboard-getting-](https://reference.digilentinc.com/_detail/reference/programmable-logic/zedboard-getting-started-with-zynq/zedboard-obl-bg-600.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart)

[started-with-zynq/zedboard-obl-bg-600.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart](https://reference.digilentinc.com/_detail/reference/programmable-logic/zedboard-getting-started-with-zynq/zedboard-obl-bg-600.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart))

Prerequisites


- Completed the Zedboard [Getting Started with Zynq](https://reference.digilentinc.com/learn/programmable-logic/tutorials/zedboard-getting-started-with-zynq/start) (<https://reference.digilentinc.com/learn/programmable-logic/tutorials/zedboard-getting-started-with-zynq/start>) - Have SDK installed

Tutorial

This demo will show how to build a basic PWM controller to manipulate on board LEDs using the processing system of the Zynq processor. We will be able to change the PWM window size from the IP graphic interface and then control the duty cycle in C written for the processor.


1. Open Vivado and create a new project

Open a new project as shown in the Zybo Getting Started Guide
Go to **Tools**→**Create and package IP**

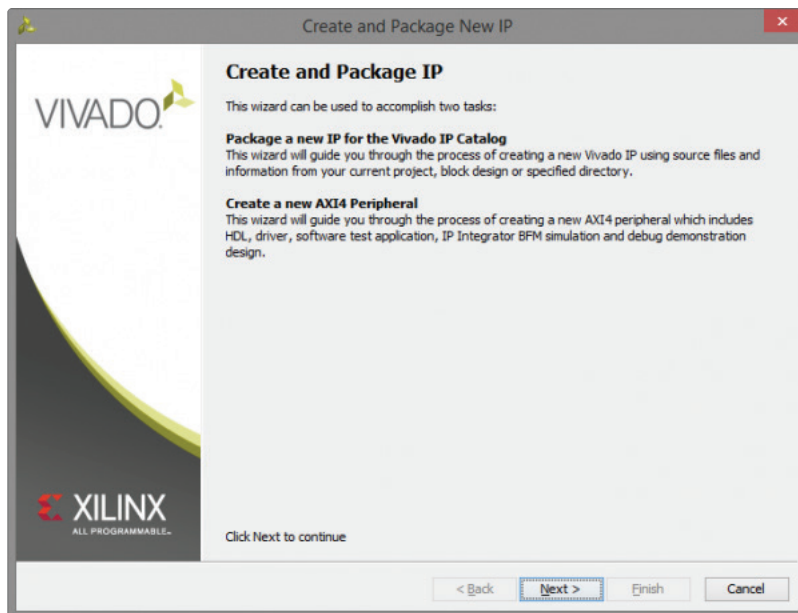


2. Create your custom IP project


2.1) Select **Create a new AXI4 peripheral** and click **Next**

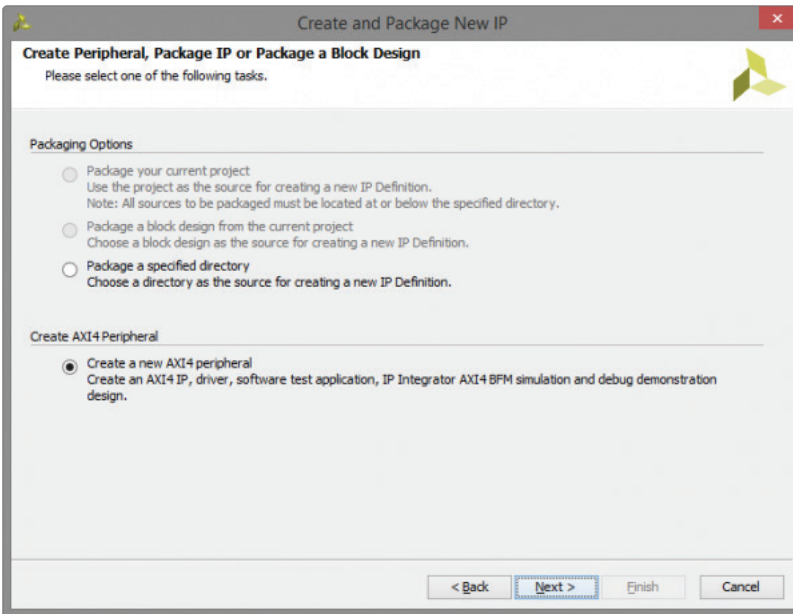


2.2) Input "My_PWM_Core" in the name field and click **Next**

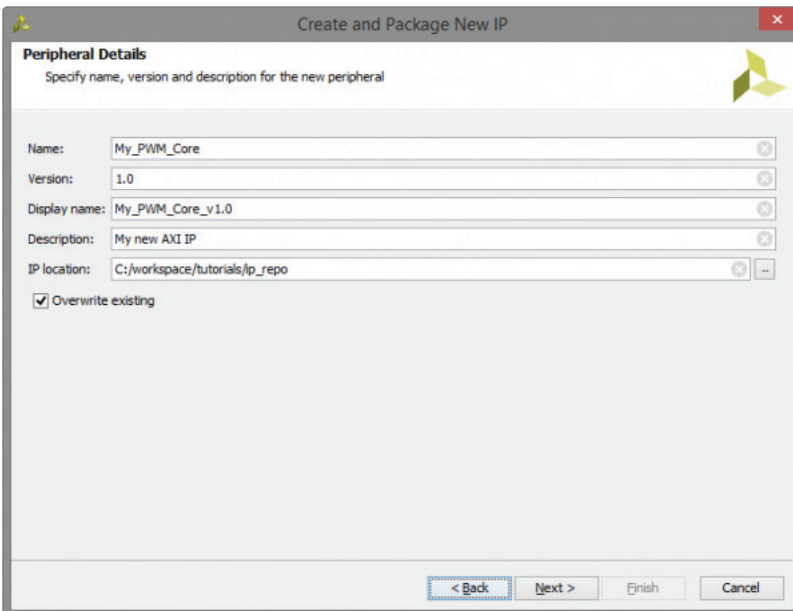

2.3) No changes to the AXI interface are required, so click **Next**

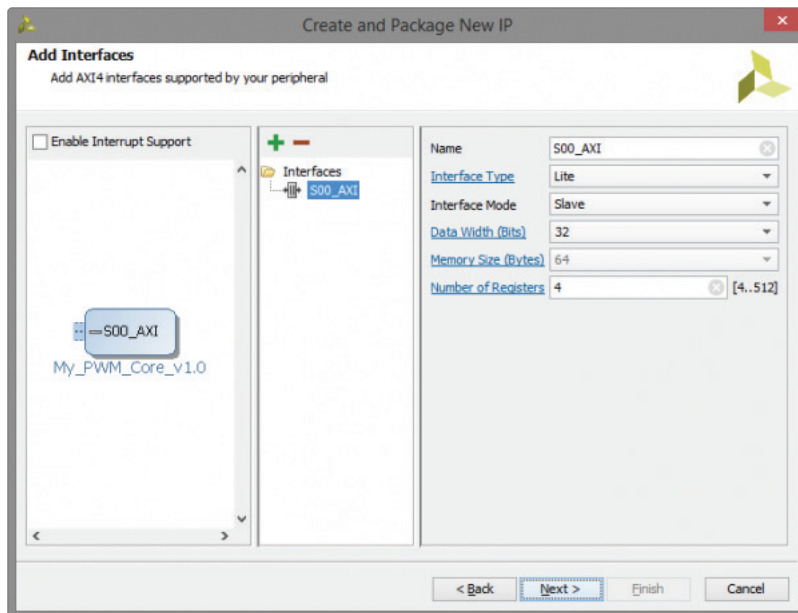

2.4) Select **Edit IP** and click **Finish**

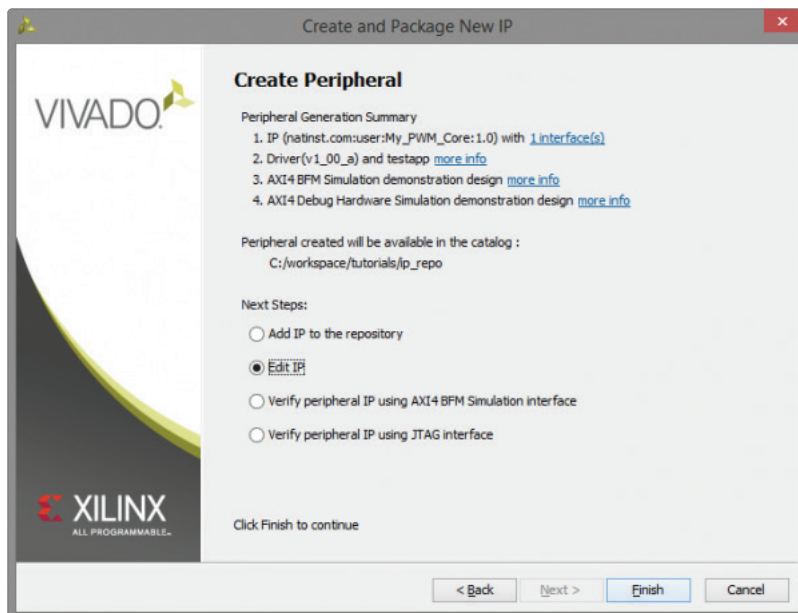

3. Designing the IP core

3.1) A new instance of Vivado will open up for the new IP core. Expand the top level file **My_PWM_Core_v1_0**. Then double-click on **My_PWM_Core_v1_0_S00_AXI** to open it in the editor.

4. Modifying My_PWM_Core_v1_0_S00_AXI

4.1) To allow for the user to change the maximum value of the PWM window in the top level, change this:

```
// Users to add parameters here

// User parameters ends
// Do not modify the parameters beyond this line
```

To this:

```
// Users to add parameters here
parameter integer PWM_COUNTER_MAX = 1024,
// User parameters ends
// Do not modify the parameters beyond this line
```

4.2) To give the PWM signals a port out of the custom IP core, change this:

```
// Users to add ports here

// User ports ends
// Do not modify the ports beyond this line
```

To this:

```
// Users to add ports here
output wire PWM0,
output wire PWM1,
output wire PWM2,
output wire PWM3,
// User ports ends
// Do not modify the ports beyond this line
```

4.3) The following modification creates a counter that is 16-bits wide with a maximum of $(2^{16})-1$, which will be more than enough for most applications. Scroll to the bottom of the file and change this:

```
// Add user logic here

// User logic ends
```

To this:

```
// Add user logic here
reg [15:0] counter = 0;

//simple counter
always @(posedge S_AXI_ACLK) begin
    if(counter < PWM_COUNTER_MAX-1)
        counter <= counter + 1;
    else
        counter <= 0;
end

//comparator statements that drive the PWM signal
assign PWM0 = slv_reg0 < counter ? 1'b0 : 1'b1;
assign PWM1 = slv_reg1 < counter ? 1'b0 : 1'b1;
assign PWM2 = slv_reg2 < counter ? 1'b0 : 1'b1;
assign PWM3 = slv_reg3 < counter ? 1'b0 : 1'b1;

// User logic ends
```

Overall this module will write data into the slave registers from the processor. The simple counter will count till the max value and reset forever. Then each of the comparator statements checks if the current counter value is greater than the value stored in the slave registers and sets PWM high if the compare value is less than the current counter.

What we have accomplished:

- Parameterized the PWM window size with PWM_COUNTER_MAX
- Added ports so the higher level file can get the PWM signals
- Added a simple counter that counts from zero to PWM_COUNTER_MAX-1
- Added four asynchronous comparator signals that create the PWM signal

5. Modifying My_PWM_Core_v1_0

5.1) Double-click on **My_PWM_Core_v1_0** to open it in the editor.

The following modifications add the ports for the PWM signals and the parameter up to the top HDL file. This will allow the `GUI()` to change, connect, and modify the IP core.

5.2) Change this:

```
module My_PWM_Core_v1_0 #
(
    // Users to add parameters here

    // User parameters ends
    // Do not modify the parameters beyond this line
```

To this:

```
module My_PWM_Core_v1_0 #
(
    // Users to add parameters here
    parameter integer PWM_COUNTER_MAX = 128,

    // User parameters ends
    // Do not modify the parameters beyond this line
```

5.3) Then change this:

```
// Users to add ports here

// User ports ends
```

To this:

```
// Users to add ports here
output wire PWM0,
output wire PWM1,
output wire PWM2,
output wire PWM3,
// User ports ends
```

5.4) And this:

```
// Instantiation of Axi Bus Interface S00_AXI
My_PWM_Core_v1_0_S00_AXI # (
    .C_S_AXI_DATA_WIDTH(C_S00_AXI_DATA_WIDTH),
    .C_S_AXI_ADDR_WIDTH(C_S00_AXI_ADDR_WIDTH)
) My_PWM_Core_v1_0_S00_AXI_inst (
    .S_AXI_ACLK(s00_axi_aclk),
    .S_AXI_ARESETN(s00_axi_aresetn),
    .S_AXI_AWADDR(s00_axi_awaddr),
    .S_AXI_AWPROT(s00_axi_awprot),
    .S_AXI_AWVALID(s00_axi_awvalid),
    .S_AXI_AWREADY(s00_axi_awready),
    .S_AXI_WDATA(s00_axi_wdata),
    .S_AXI_WSTRB(s00_axi_wstrb),
    .S_AXI_WVALID(s00_axi_wvalid),
    .S_AXI_WREADY(s00_axi_wready),
    .S_AXI_BRESP(s00_axi_bresp),
    .S_AXI_BVALID(s00_axi_bvalid),
    .S_AXI_BREADY(s00_axi_bready),
    .S_AXI_ARADDR(s00_axi_araddr),
    .S_AXI_ARPROT(s00_axi_arprot),
    .S_AXI_ARVALID(s00_axi_arvalid),
    .S_AXI_ARREADY(s00_axi_arready),
    .S_AXI_RDATA(s00_axi_rdata),
    .S_AXI_RRESP(s00_axi_rresp),
    .S_AXI_RVALID(s00_axi_rvalid),
    .S_AXI_RREADY(s00_axi_rready)
);
```


To this:

```
// Instantiation of Axi Bus Interface S00_AXI
My_PWM_Core_v1_0_S00_AXI # (
    .C_S_AXI_DATA_WIDTH(C_S00_AXI_DATA_WIDTH),
    .C_S_AXI_ADDR_WIDTH(C_S00_AXI_ADDR_WIDTH),
    .PWM_COUNTER_MAX(PWM_COUNTER_MAX)
) My_PWM_Core_v1_0_S00_AXI_inst (
    .PWM0(PWM0),
    .PWM1(PWM1),
    .PWM2(PWM2),
    .PWM3(PWM3),
    .S_AXI_ACLK(s00_axi_aclk),
    .S_AXI_ARESETN(s00_axi_aresetn),
    .S_AXI_AWADDR(s00_axi_awaddr),
    .S_AXI_AWPROT(s00_axi_awprot),
    .S_AXI_AWVALID(s00_axi_awvalid),
    .S_AXI_AWREADY(s00_axi_awready),
    .S_AXI_WDATA(s00_axi_wdata),
    .S_AXI_WSTRB(s00_axi_wstrb),
    .S_AXI_WVALID(s00_axi_wvalid),
    .S_AXI_WREADY(s00_axi_wready),
    .S_AXI_BRESP(s00_axi_bresp),
    .S_AXI_BVALID(s00_axi_bvalid),
    .S_AXI_BREADY(s00_axi_bready),
    .S_AXI_ARADDR(s00_axi_araddr),
    .S_AXI_ARPROT(s00_axi_arprot),
    .S_AXI_ARVALID(s00_axi_arvalid),
    .S_AXI_ARREADY(s00_axi_arready),
    .S_AXI_RDATA(s00_axi_rdata),
    .S_AXI_RRESP(s00_axi_rresp),
    .S_AXI_RVALID(s00_axi_rvalid),
    .S_AXI_RREADY(s00_axi_rready)
);
```


6. Packaging the IP core

Now that we have written the core, it is time to package up the HDL to create a complete IP package.


6.1) Now click on **Package IP** in the Flow Navigator and you should see the Package IP tab. Select **Compatibility** and make sure “Artix7” and “Zynq” are present. If those are not there, you can add them by clicking the plus button. The Life Cycle does not matter at this point.

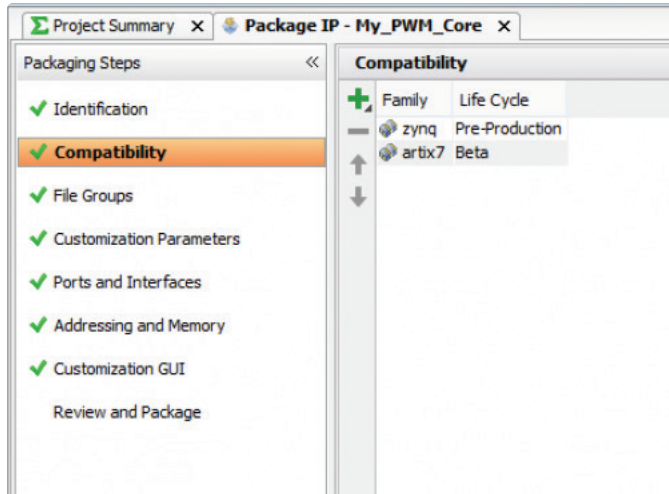


6.2) Select **Customization Parameters** and select the line for **Merge Changes from Customization Parameters Wizard**. This will add the PWM_COUNTER_MAX parameter from the top file under the hidden parameters folder.

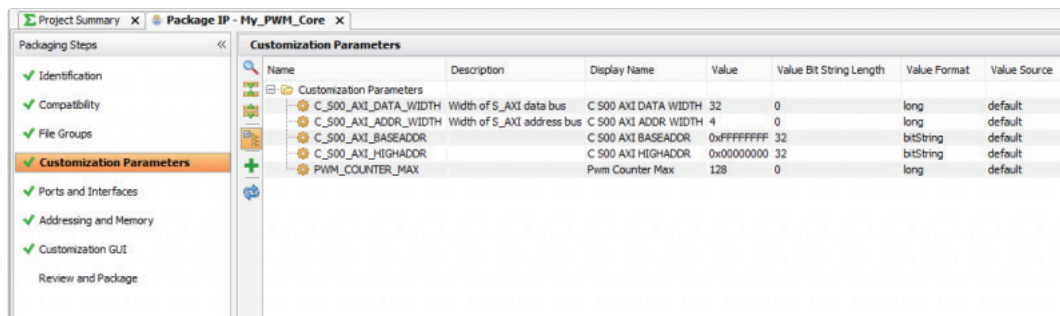


6.3) Select **Customization GUI** (). This is where we get to change our graphical interface. One problem, there is not a window for our parameter. Right-click **Pwm Counter Max** and select **Edit Parameter....** Check the box next to **Visible in Customization GUI** (). Check the **Specify Range** box. Select **Range of Integers** from the **Type** drop-down menu. Since we have a max value of $(2^{16})-1 = 65535$ and a min value of 0, then Click **Ok**.

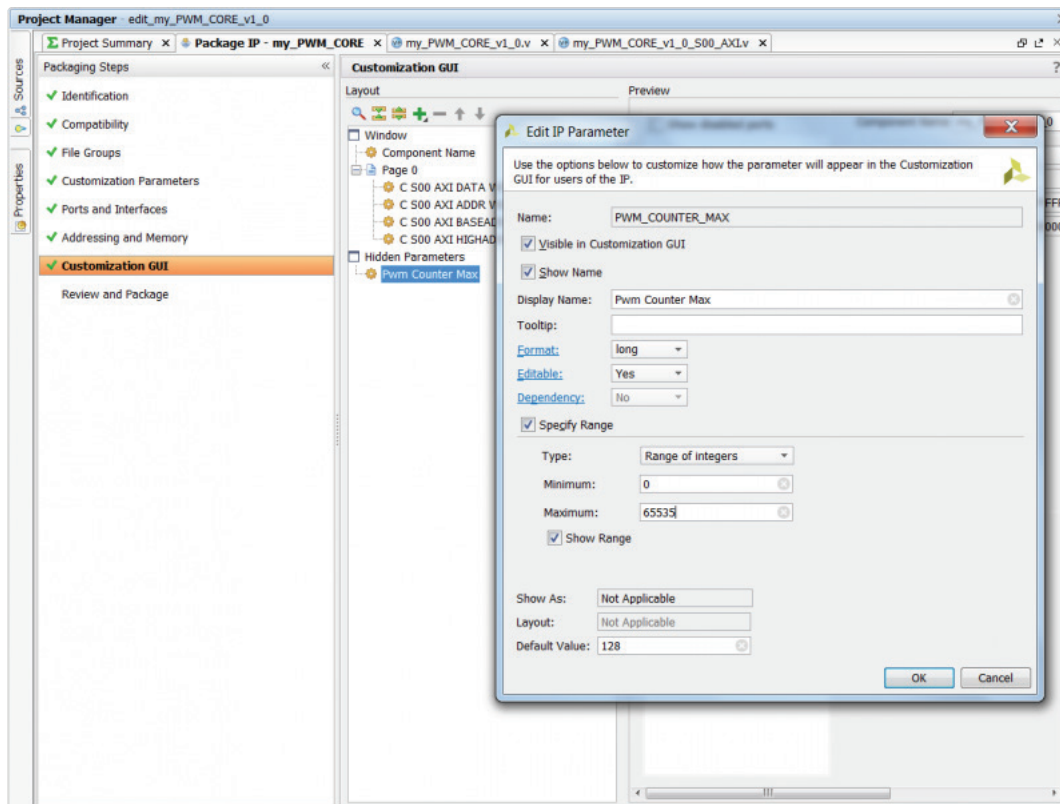


6.4) Drag the **Pwm Counter Max** into **Page 0** to get it in the main page.

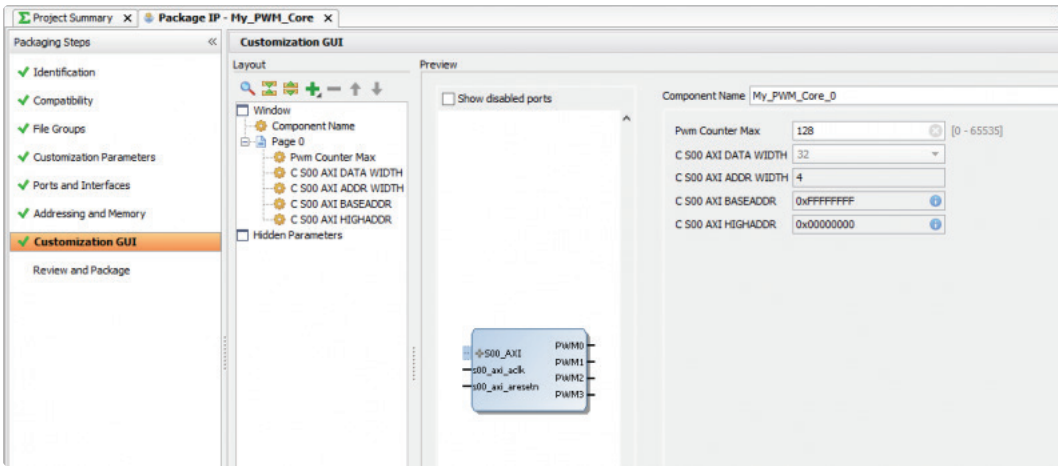

6.5) Now the core should be complete so select **Review and Package** and click the **Re-package IP** button.

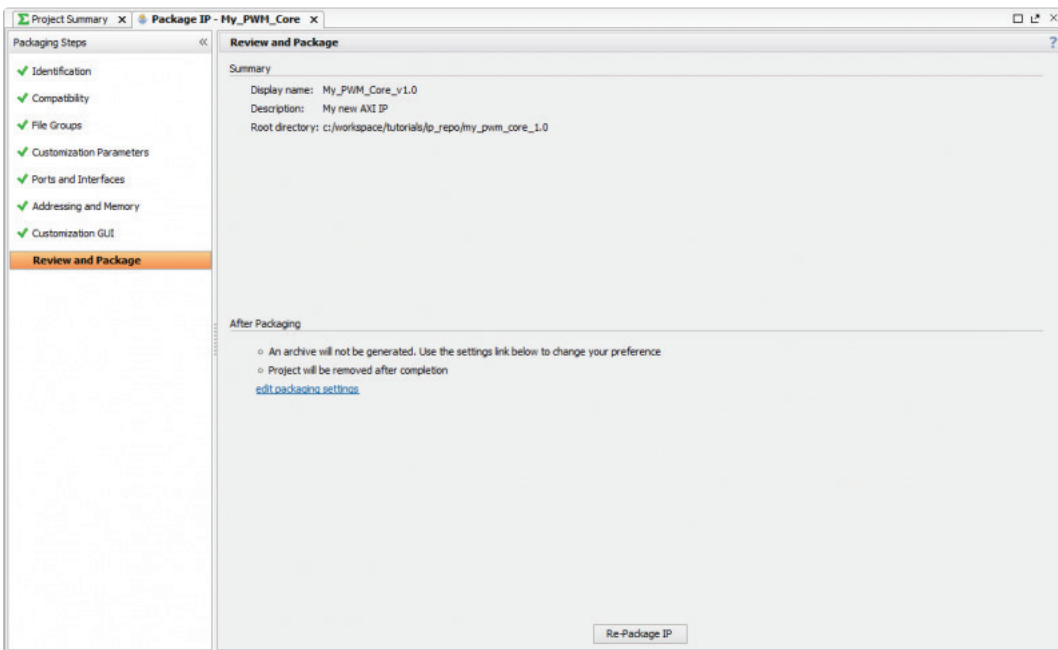


6.6) A popup will ask if you want to close the project, Select **Yes**.

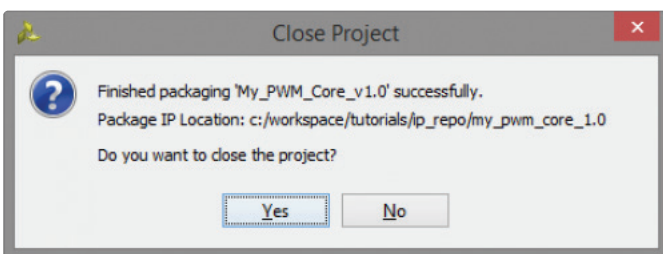


7. Create Zynq design

7.1) In the project manager page of the original window, click **Create Block Design**. This adds a block design to the project.


7.2) Use the **Add IP** button to add the **Zynq Processing System**.

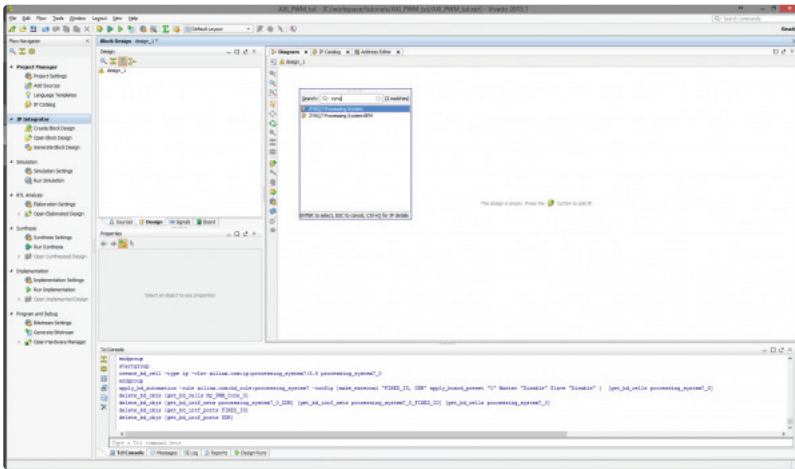


7.3) Use the **Add IP** button again to add our **PWM core**.

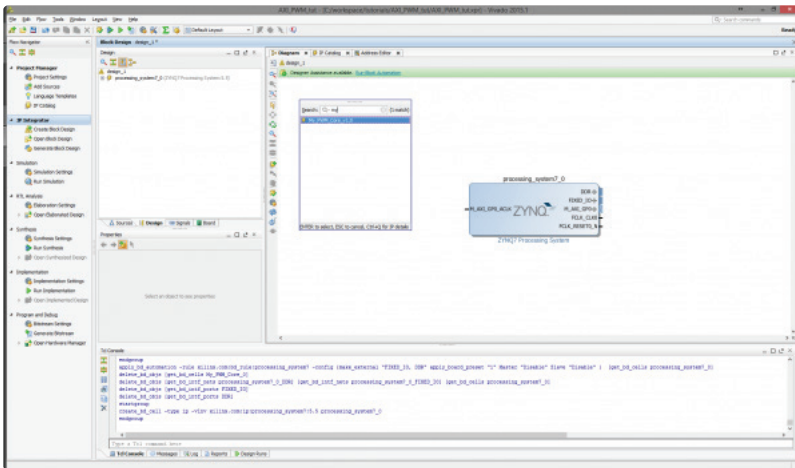

7.4) Run Block Automation.

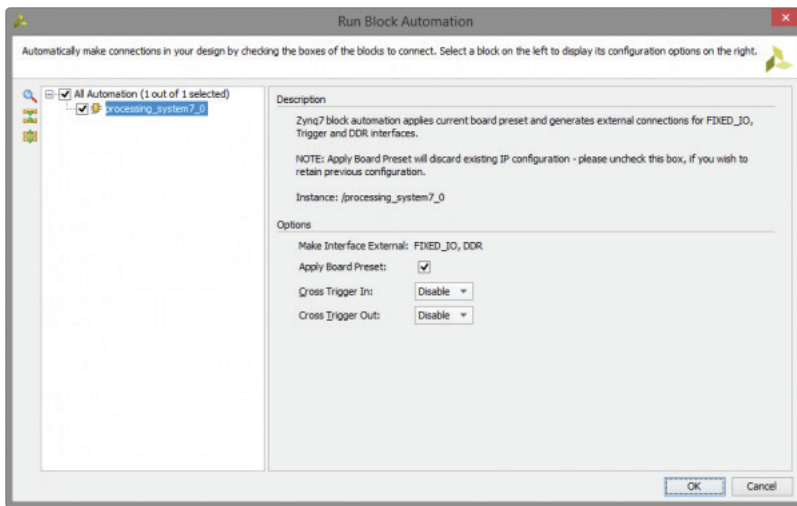


7.5) The connection automation tool will add the required logic blocks for the demo. Select **Run Connection Automation** highlighted in blue.

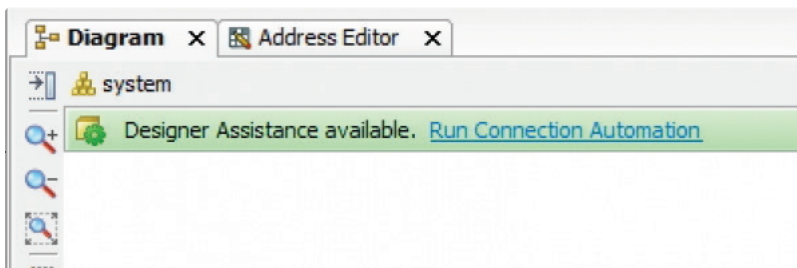


([https://reference.digilentinc.com/_detail/reference/programmable-logic/zedboard-getting-](https://reference.digilentinc.com/_detail/reference/programmable-logic/zedboard-getting-started-with-zynq/image_15.jpg?tid=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart)

[started-with-zynq/image_15.jpg?tid=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart](https://reference.digilentinc.com/_detail/reference/programmable-logic/zedboard-getting-started-with-zynq/image_15.jpg?tid=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart))


7.6) Your design should look like this:

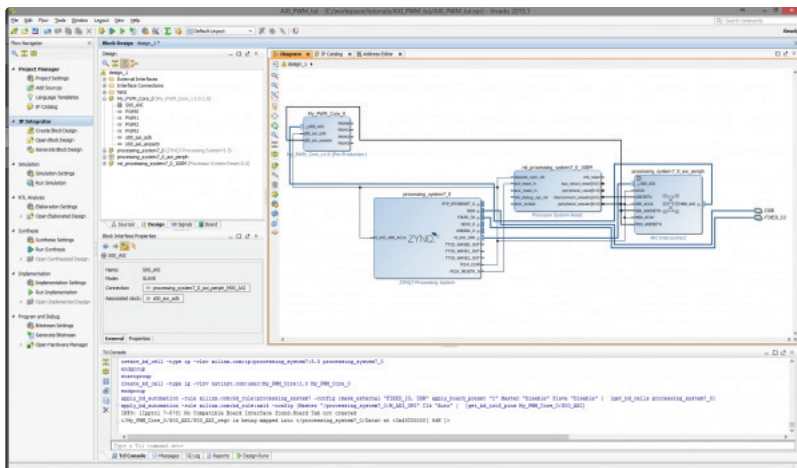


7.7) Double-click our **PWM core** to customize the parameter that we made earlier. Set the PWM Counter Max to 1024. and click **OK**.

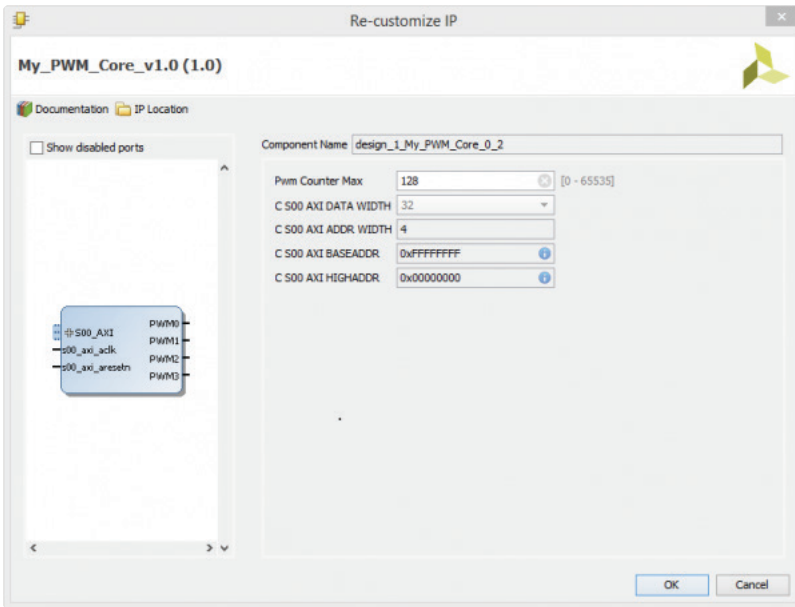


7.8) Right-click each of the PWM signals and select **Create Port...**

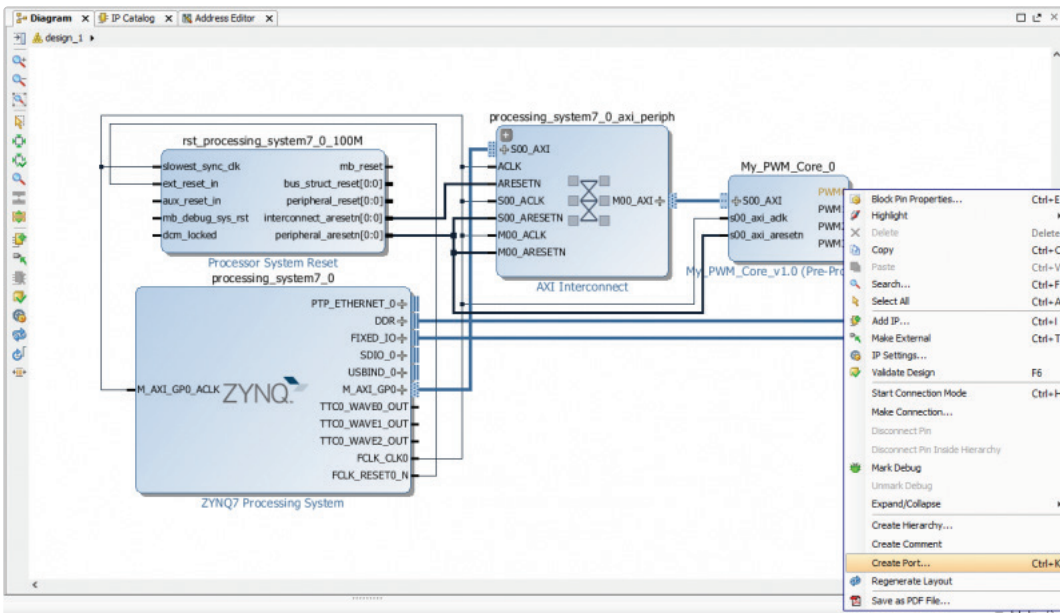


7.9) Click the button for **Validate Design**.

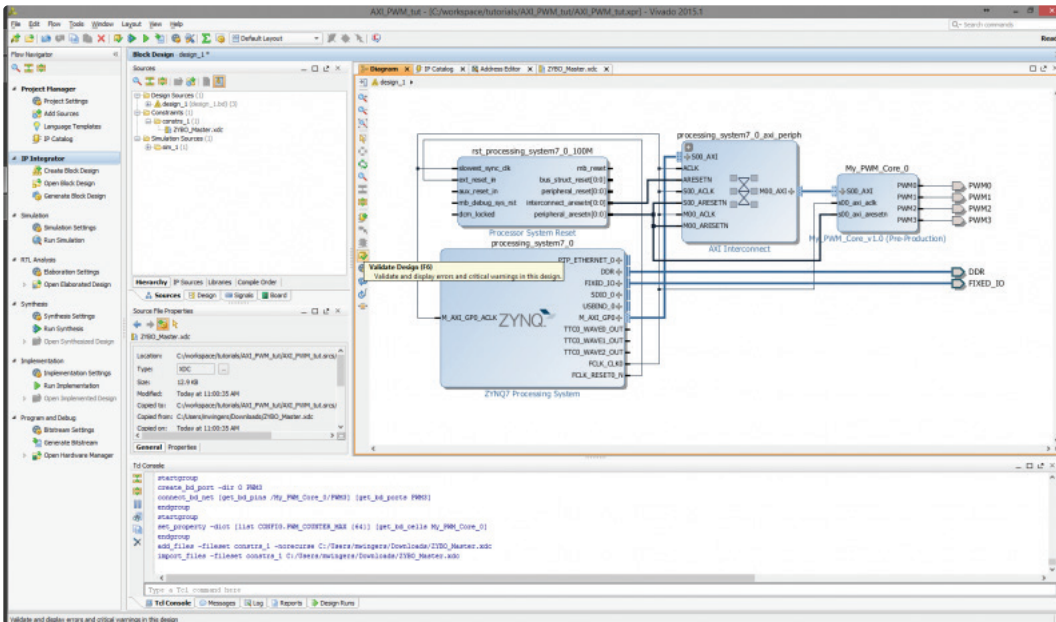

7.10) Click **Project Manager**, right-click the “design_1.db” file and **Create HDL Wrapper...**

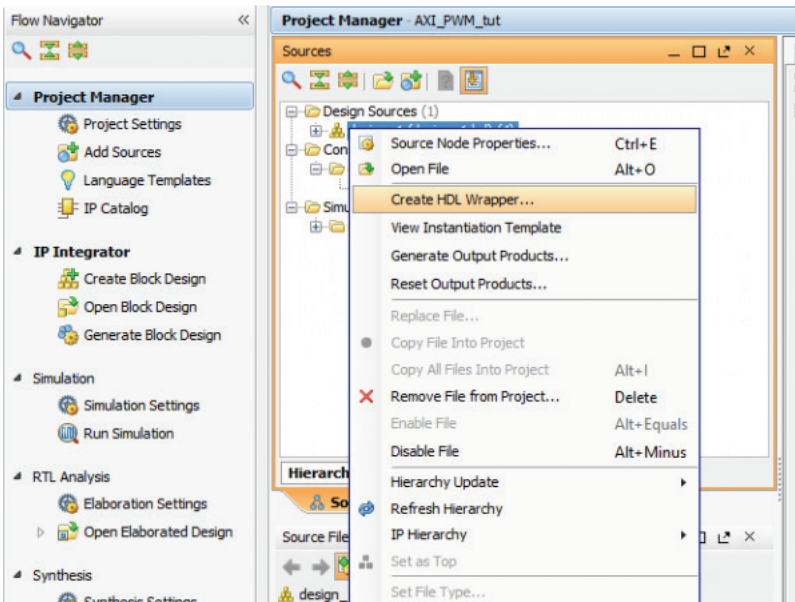

7.11) Double-click **design_1_wrapper.v** to open it in the editor. Take note of the name for the PWM signals. Add the "zedboard_master_XDC_RevC_D_v3.xdc" constraint file that can be downloaded *  ZedBoard.org (<http://zedboard.org/support/documentation/1521>)* First comment all lines then uncomment the lines of code for the LEDs in the xdc file and change this:

```
## -----  
## User LEDs - Bank 33  
## -----  
set_property PACKAGE_PIN T22 [get_ports {LD0}]; # "LD0"  
set_property PACKAGE_PIN T21 [get_ports {LD1}]; # "LD1"  
set_property PACKAGE_PIN U22 [get_ports {LD2}]; # "LD2"  
set_property PACKAGE_PIN U21 [get_ports {LD3}]; # "LD3"
```

To this:

```
## -----  
## User LEDs - Bank 33  
## -----  
set_property PACKAGE_PIN T22 [get_ports {PWM0}]; # "PWM0"  
set_property PACKAGE_PIN T21 [get_ports {PWM1}]; # "PWM1"  
set_property PACKAGE_PIN U22 [get_ports {PWM2}]; # "PWM2"  
set_property PACKAGE_PIN U21 [get_ports {PWM3}]; # "PWM3"
```

Then uncomment the lines of code for bank 33 in the xdc file and change this:


```
# Un-comment one or more of the following IOSTANDARD constraints according to  
# the bank pin assignments that are required within a design.  
# -----  
  
# Note that the bank voltage for IO Bank 33 is fixed to 3.3V on ZedBoard.  
#set_property IOSTANDARD LVCMOS33 [get_ports -of_objects [get_iobanks 33]];
```

To this:


```
# Un-comment one or more of the following IOSTANDARD constraints according to  
# the bank pin assignments that are required within a design.  
# -----  
  
# Note that the bank voltage for IO Bank 33 is fixed to 3.3V on ZedBoard.  
set_property IOSTANDARD LVCMOS33 [get_ports -of_objects [get_iobanks 33]];
```

7.12) Click **Generate Bitstream**. Building the bit file can take some time.


7.13) Export the hardware by going to **File**→**Export**→**Export Hardware...**

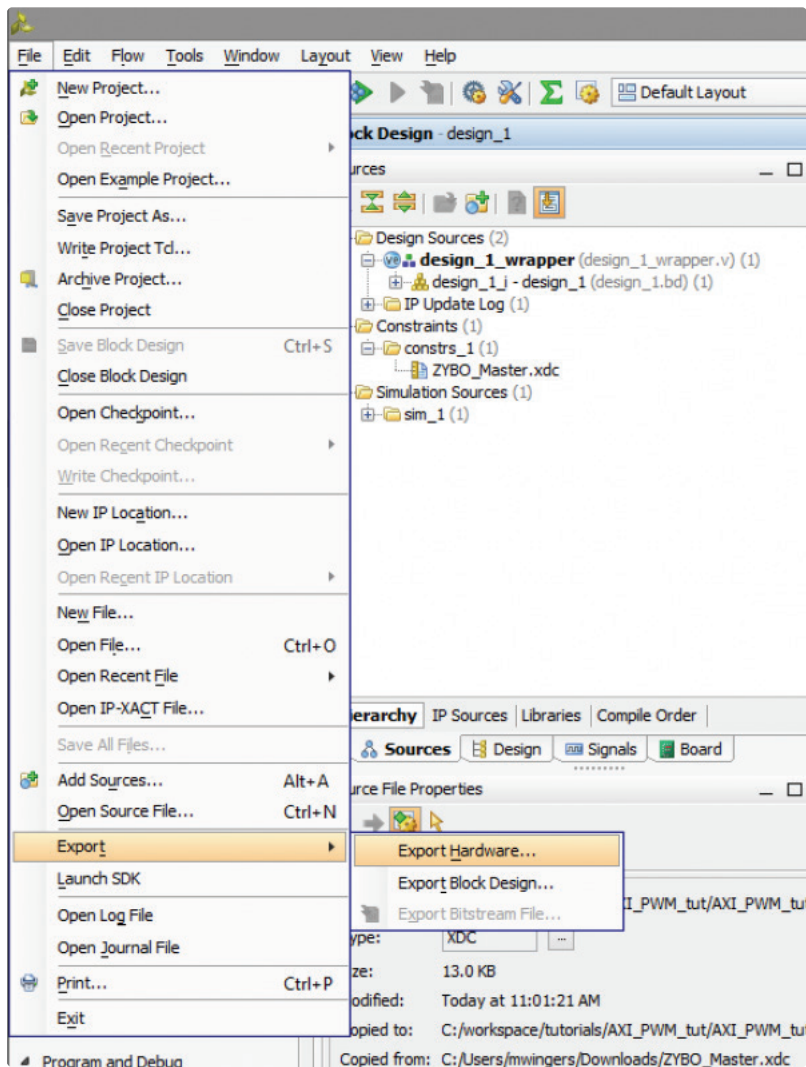

7.14) Check the box **Include bitstream** and click **Ok**

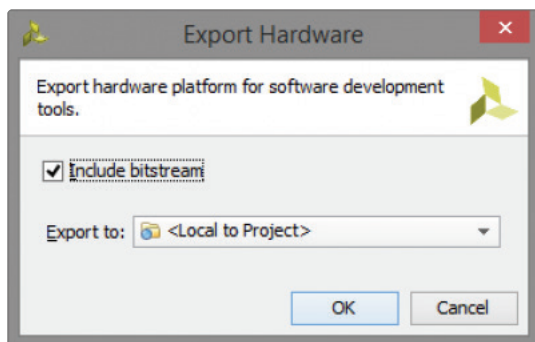


7.15) Select **File**→**Launch SDK**, and hit **Ok** on the window that pops up.

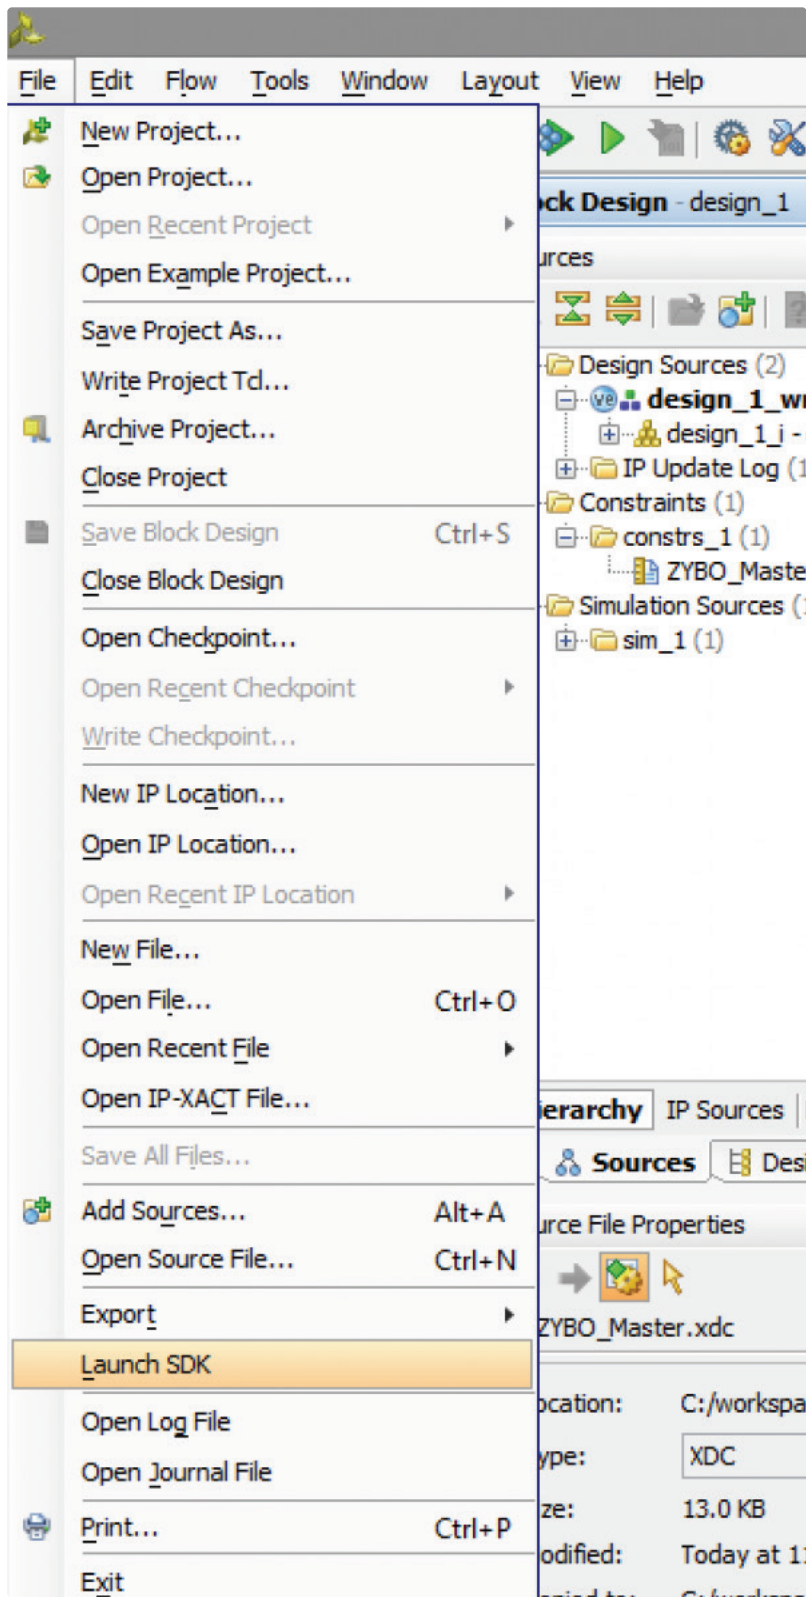


8. Programming in SDK

8.1) Create a new application project

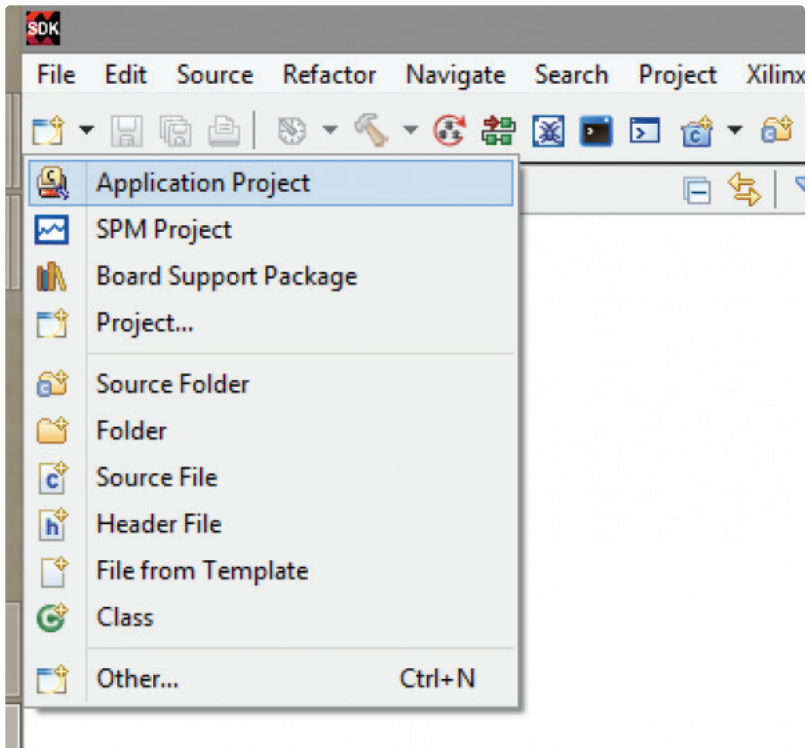


8.2) Setup the window as shown below and then click **Next**

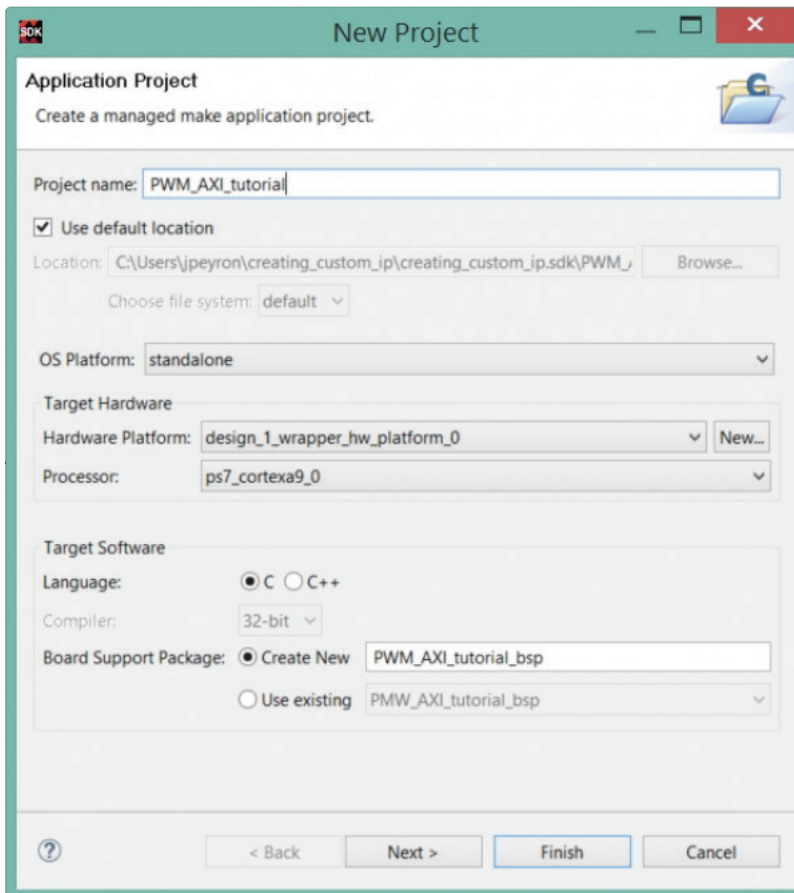

https://reference.digilentinc.com/_detail/learn/programmable-logic/tutorials/zedboard-

[creating-custom-ip-cores/image_15.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart](https://reference.digilentinc.com/_detail/learn/programmable-logic/tutorials/zedboard-creating-custom-ip-cores/image_15.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart)


8.3) Select **Empty Application** and then click **Finish**.

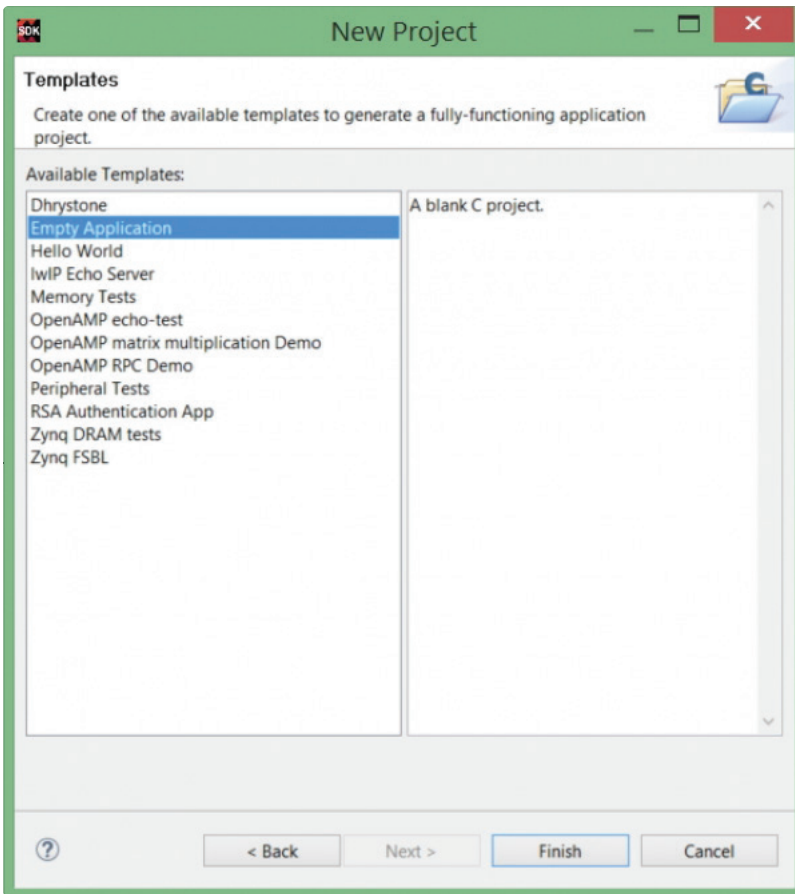

[https://reference.digilentinc.com/_detail/learn/programmable-logic/tutorials/zedboard-](https://reference.digilentinc.com/_detail/learn/programmable-logic/tutorials/zedboard-creating-custom-ip-cores/image_13.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart)

[creating-custom-ip-cores/image_13.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart](https://reference.digilentinc.com/_detail/learn/programmable-logic/tutorials/zedboard-creating-custom-ip-cores/image_13.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart)

8.4) Expand the **PWM_AXI_tutorial**→**src** folder. Right-click the **src** folder and **add a new file**. Create a file named “main.c”.

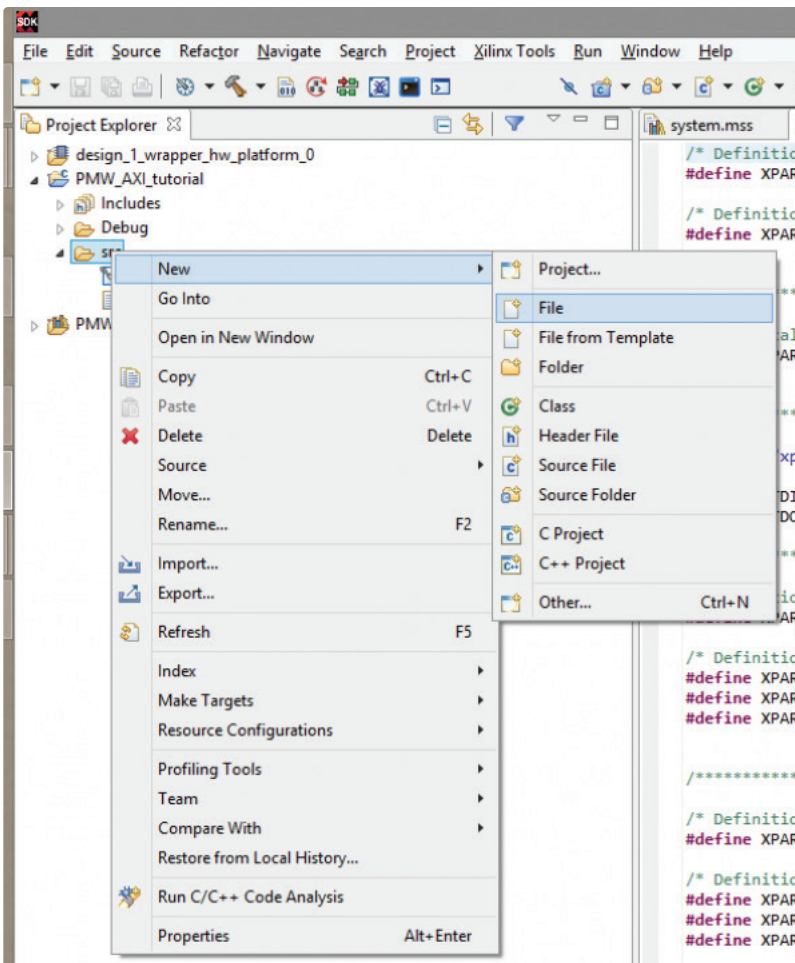

8.5) Add the lines:

```
#include "xparameters.h"
#include "xil_io.h"

//#define MY_PWM XPAR_MY_PWM_CORE_0_S00_AXI_BASEADDR //Because of a bug in Vivado 2015.3 and 2015.4, this value is not correct.
#define MY_PWM 0x43C00000 //This value is found in the Address editor tab in Vivado (next to Diagram tab)


int main(){
    int num=0;
    int i;

    while(1){
        if(num == 1024)
            num = 0;
        else
            num++;

        Xil_Out32(MY_PWM, num);
        Xil_Out32((MY_PWM+4), num);
        Xil_Out32((MY_PWM+8), num);
        Xil_Out32((MY_PWM+12), num);

        for(i=0;i<300000; i++);
    }
}
```

8.6) To program the FPGA, Go to **Xilinx Tools**→**Program FPGA**. To load the SDK application onto the Zedboard, right-click on “PWM_AXI_tutorial” and select **Run As**→**Launch on Hardware (System Debugger)**.

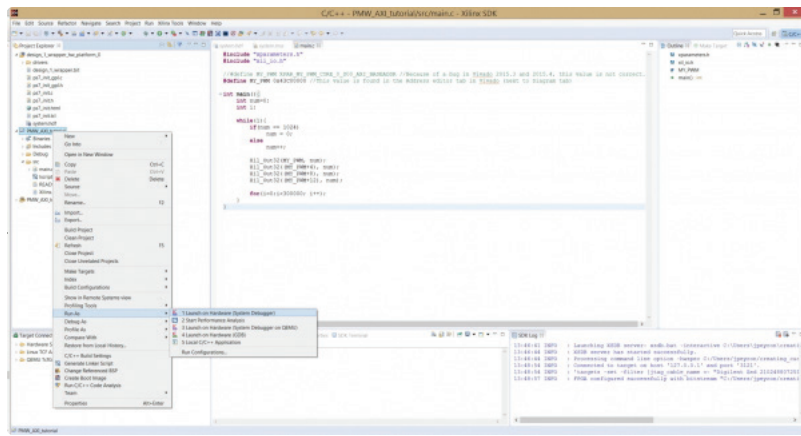

(https://reference.digilentinc.com/_detail/learn/programmable-logic/tutorials/zedboard-creating-custom-ip-cores/image_14.jpg?id=learn%3Aprogrammable-logic%3Atutorials%3Azedboard-creating-custom-ip-cores%3Astart)

9. Celebrate!

Now the 4 LEDs on the Zedboard will be pulsing. Lean back in your chair and feel accomplished because you just created your own custom IP core.

learn (<https://reference.digilentinc.com/tag/learn?do=showtag&tag=learn>), programmable-logic (<https://reference.digilentinc.com/tag/programmable-logic?do=showtag&tag=programmable-logic>), tutorial (<https://reference.digilentinc.com/tag/tutorial?do=showtag&tag=tutorial>), zedboard (<https://reference.digilentinc.com/tag/zedboard?do=showtag&tag=zedboard>)

Our Partners

- **Xilinx University Program** (<https://store.digilentinc.com/partners/university-program/>)
- **Technology Partners** (<https://store.digilentinc.com/technology-partners/>)
- **Distributors** (<https://store.digilentinc.com/our-distributors/>)

Help

- **Technical Support Forum** (<https://support.digilent.com/>)
- **Reference Wiki** (<https://reference.digilentinc.com/>)
- **Contact Us** (<https://store.digilentinc.com/contact-us/>)

Customer Info

- **Videos** (<https://youtube.com/user/digilentinc>)
- **FAQ** (<https://resource.digilentinc.com/en/faq/>)
- **Store Info** (<https://store.digilentinc.com/store-info/>)


Company Info

- **About Us** (<https://store.digilentinc.com/pages/pageid=26>)
- **Shipping & Returns** (<https://store.digilentinc.com/shipping-returns/>)
- **Legal** (<https://store.digilentinc.com/legal/>)
- **Jobs** (<https://store.digilentinc.com/jobs/>)
- **Internships** (<https://store.digilentinc.com/internships/>)

Connect With Us



(<https://twitter.com/digilentinc>)

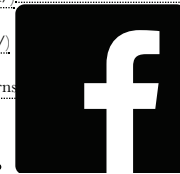


(<https://www.facebook.com/Digilent>)



<https://www.youtube.com/user/DigilentInc>



• <https://instagram.com/digilenti>

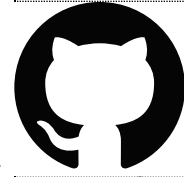

• <https://github.com/digilent>



• <https://www.reddit.com/r/digilent>



• <https://www.linkedin.com/company/1454013>



• <https://www.flickr.com/photos/127815101@N07>