

Exam 1b

Date: Oct 3, 2019

UT EID: _____

Professor: Valvano

Printed Name: _____

Last,

First

Your signature is your promise that you have not cheated and will not cheat on this exam, nor will you help others to cheat on this exam:

Signature: _____

Instructions:

- Closed book and closed notes. No books, no papers, no data sheets (other than the last two pages of this Exam)
- No devices other than pencil, pen, eraser (no calculators, no electronic devices), please turn cell phones off.
- Please be sure that your answers to all questions (and all supporting work that is required) are contained in the space (boxes) provided. *Anything outside the boxes/blanks will be ignored in grading.* You may use the back of the sheets for scratch work.
- You have 75 minutes, so allocate your time accordingly.
- For all questions, unless otherwise stated, find the most efficient (time, resources) solution.
- Unless otherwise stated, make all I/O accesses friendly and all subroutines AAPCS compliant.
- *Please read the entire exam before starting.*

(12) Question 1.


(2) Part a) Which equation describes the power dissipated in an LED?

- A) $P = V/I$
- B) $P = V^2 * R$
- C) $P = I^2 * R$
- D) $P = V/R^2$
- E) Some of A – D
- F) None of A – D

(2) Part b) If you multiply an n -bit unsigned number to an m -bit unsigned, number what is the maximum number of bits in the product? Assume $n \geq m$.

(2) Part c) Assume you add two signed 32-bit numbers using the **ADDS R2 ,R1 ,R0** instruction. Which bit is set on overflow?

(2) Part d) Sketch an approximate plot of LED current as a function of LED voltage (show plot for both positive and negative voltages).

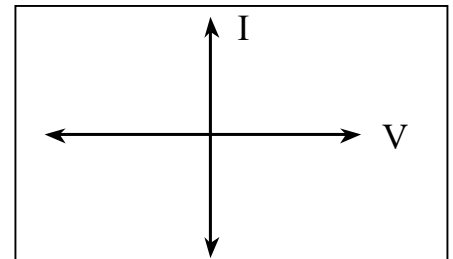


For Parts e and f) choose

- A) Can be accessed from anywhere in the system
- B) Restricted to within the function
- C) Stored permanently in ROM
- D) Stored permanently in RAM
- E) Nonvolatile
- F) Stored in R14
- G) Stored temporarily in a register or on the stack

(2) Part e) What is the scope of a local variable in C?

(2) Part f) Where are global variables allocated in C?

(6) Question 2. Consider a ULN2003B driver chip, where the input **In** is connected to B, the emitter is grounded, and the output **Out** is connected to C.

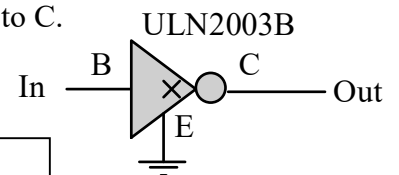

What is **Out** if **In** is 0.0V?

What is **Out** if **In** is 3.3V?

(12) **Question 3.** There is an 8-bit unsigned global variable called **Stuff**.

```
AREA DATA,ALIGN=2
```

```
Stuff SPACE 1
```

Write Cortex M assembly subroutine that performs the same operation as this C function

```
uint8_t Stuff;
void ShiftandAdd(void) {
    Stuff = (Stuff>>2)+5;
}
```

(5) **Question 4.** There is a 32-bit constant called **Thing**.

```
AREA |.text|, CODE, READONLY, ALIGN=2
```

```
Thing DCD 0x9A1234F0
```

What is the value of R0 in hex after this assembly code is executed?


```
LDR R1,=Thing
LDRSB R0,[R1]
```

(12) **Question 5.** Show the declaration of a C function that finds the minimum value of an array. The length of the array is fixed at 1000. A pointer to the array is passed by reference into the function. The function returns the smallest value in the array. The function prototype is

```
int8_t min(int8_t data[1000]);
```

(10) Question 6. Interface eight switches to Port B using negative logic.

(5) Part a) For full credit, design the hardware/software interface that uses the fewest number of external components.

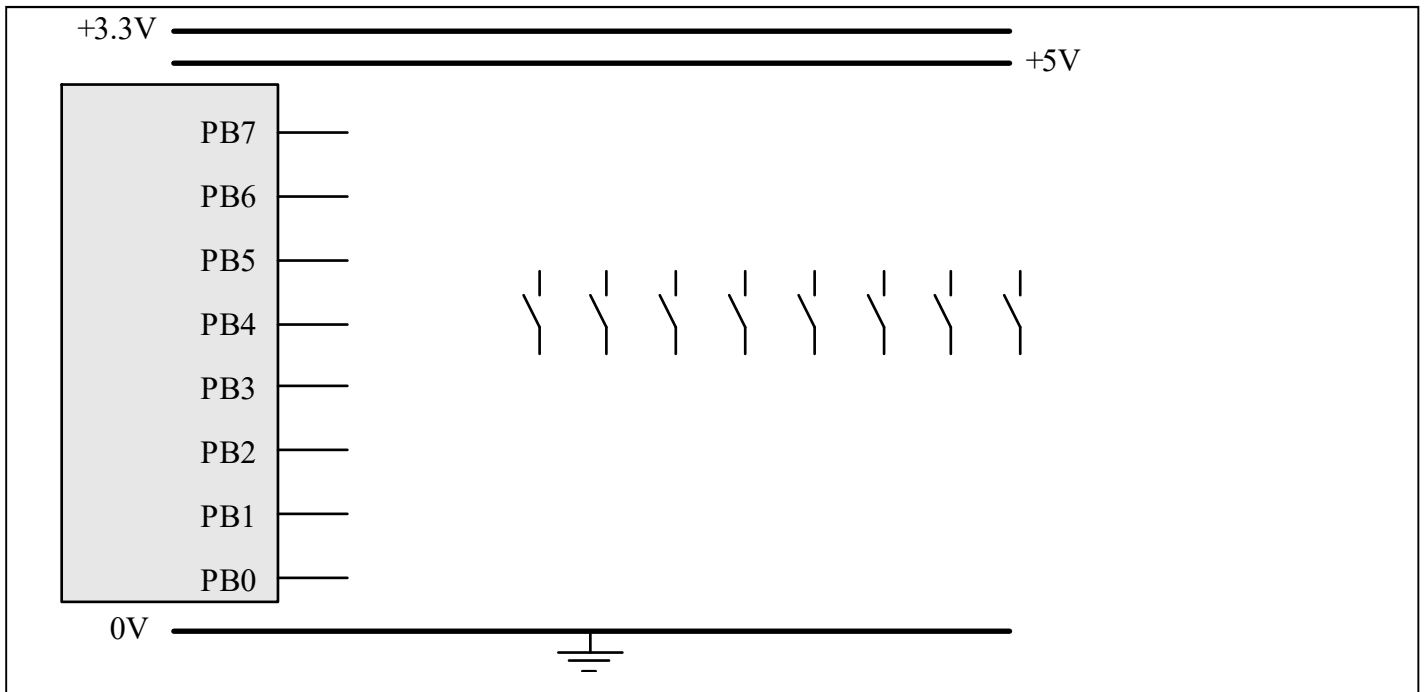


(5) Part b) During initialization what values should you write into the following registers? For registers you would not initialize, enter NA into the box. You may assume the Port B clock has been activated.

GPIO_PORTB_DATA_R	<input type="text"/>
GPIO_PORTB_DIR_R	<input type="text"/>
GPIO_PORTB_PUR_R	<input type="text"/>
GPIO_PORTB_PDR_R	<input type="text"/>
GPIO_PORTB_DEN_R	<input type="text"/>

(10) Question 7. Interface an LED to PA7 using positive logic.

(5) Part a) The desired LED operating point is 2V, 2mA. The microcontroller output high voltage is 3.2V, the microcontroller output low voltage is 0.1V. The ULN2003B output low voltage is 0.3V. For full credit, design an interface that uses the fewest number of external components. For any resistor(s) you use, show your work for determining the resistor value(s).

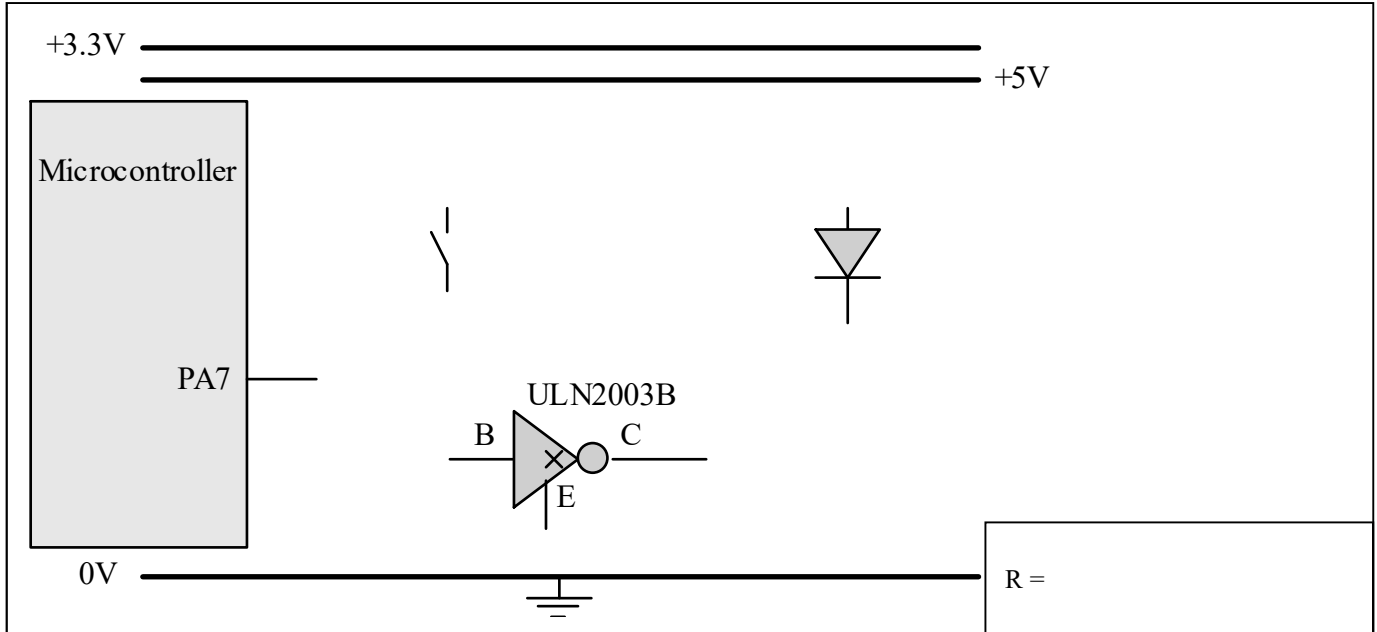

(5) Part b) Assume Port A has been initialized so PA7 is an output. Write a function in C that accepts an input parameter (0 or 0x80) and writes to Port A in a friendly manner. Include both the prototype and the declaration of the function.

```
#define GPIO_PORTA_DATA_R (*(volatile uint32_t *)0x400043FC)
```


(8) Question 8. Assume the value of the Stack pointer (SP) is **0x2000FFC** when the following code sequence starts execution (i.e., **PC=0x0001000**). The initial memory contents in and around the SP are given on the right. When drawing the stack contents, you need only to show values on the stack that represent actual valid stack data.

Initial PC →	0x0001000 0x0001004 0x0001008 0x000100C ... 0x0002000 0x0002004 0x0002008 0x000200C 0x0002010	POP {R0,R1} ADD R2,R0,R1 BL Func ... Func PUSH {R2,LR} ← A MOV R2,R1 MUL R0,R2 ADD R0,R1 POP {R2,PC}	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr><td style="padding: 2px;">0x2000FF4</td><td style="padding: 2px;">1</td></tr> <tr><td style="padding: 2px;">0x2000FF8</td><td style="padding: 2px;">2</td></tr> <tr><td style="padding: 2px;">0x2000FFC</td><td style="padding: 2px;">3</td></tr> <tr><td style="padding: 2px;">0x20001000</td><td style="padding: 2px;">4</td></tr> <tr><td style="padding: 2px;">0x20001004</td><td style="padding: 2px;">5</td></tr> <tr><td style="padding: 2px;">0x20001008</td><td style="padding: 2px;">6</td></tr> <tr><td style="padding: 2px;">0x2000100C</td><td style="padding: 2px;">7</td></tr> </table>	0x2000FF4	1	0x2000FF8	2	0x2000FFC	3	0x20001000	4	0x20001004	5	0x20001008	6	0x2000100C	7	Initial SP →
0x2000FF4	1																	
0x2000FF8	2																	
0x2000FFC	3																	
0x20001000	4																	
0x20001004	5																	
0x20001008	6																	
0x2000100C	7																	

Starting with PC=0x0001000 execute until arrow A. Give the SP value and stack contents after executing of the **PUSH** instruction, as shown by arrow A. Also give the values stored in R0, R1, and R2.

0x2000FF4 0x2000FF8 0x2000FFC 0x20001000 0x20001004 0x20001008 0x2000100C		SP = <input style="width: 90%;" type="text"/> R0 = <input style="width: 90%;" type="text"/> R1 = <input style="width: 90%;" type="text"/> R2 = <input style="width: 90%;" type="text"/>
---------------------------------------------------------------------------------------------	--	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

(25) Question 9. In this question there are two microcontrollers, such that the two Port B's are connected (PB7 to PB7, PB6 to PB6,...PB0 to PB0). The goal is to send a three-bit value from one microcontroller to the other.

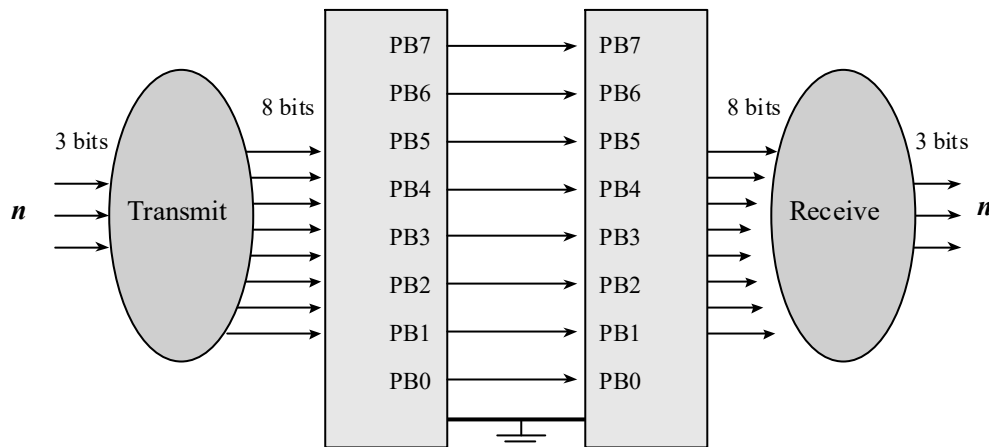

Data flow graph

The transmit software will be on the left microcontroller. At all times the transmitter must have exactly one of the Port B pins high. I.e., the 8-bit Port B data must be 0x01, 0x02, 0x04, 0x08, 0x10, 0x20, 0x40, or 0x80. You may assume the transmitter on the left has initialized all of Port B to be output, and the receiver on the right has initialized all of Port B to be input. On the transmitter, design an assembly function that accepts a 3-bit value in R0 (let n be the value in R0, you may assume $0 \leq n \leq 7$) and writes to Port B the value 2^n . On the receiver design an assembly function that reads Port B (knowing the Port B value will be restricted to 2^n for some $0 \leq n \leq 7$) and returns in R0 the value n .

GPIO_PORTB_DATA_R EQU 0x400053FC

```
;Input: R0=n is 0 to 7
;Set PortB data to 2^n
Transmit
```

```
;Read PortB data, which will be 2^n
;Output: R0=n is 0 to 7
Receive
```

Memory access instructions

LDR Rd, [Rn] ; load 32-bit number at [Rn] to Rd
LDR Rd, [Rn,#off] ; load 32-bit number at [Rn+off] to Rd
LDR Rd, =value ; set Rd equal to any 32-bit value (PC rel)
LDRH Rd, [Rn] ; load unsigned 16-bit at [Rn] to Rd
LDRH Rd, [Rn,#off] ; load unsigned 16-bit at [Rn+off] to Rd
LDRSH Rd, [Rn] ; load signed 16-bit at [Rn] to Rd
LDRSH Rd, [Rn,#off] ; load signed 16-bit at [Rn+off] to Rd
LDRB Rd, [Rn] ; load unsigned 8-bit at [Rn] to Rd
LDRB Rd, [Rn,#off] ; load unsigned 8-bit at [Rn+off] to Rd
LDRSB Rd, [Rn] ; load signed 8-bit at [Rn] to Rd
LDRSB Rd, [Rn,#off] ; load signed 8-bit at [Rn+off] to Rd
STR Rt, [Rn] ; store 32-bit Rt to [Rn]
STR Rt, [Rn,#off] ; store 32-bit Rt to [Rn+off]
STRH Rt, [Rn] ; store least sig. 16-bit Rt to [Rn]
STRH Rt, [Rn,#off] ; store least sig. 16-bit Rt to [Rn+off]
STRB Rt, [Rn] ; store least sig. 8-bit Rt to [Rn]
STRB Rt, [Rn,#off] ; store least sig. 8-bit Rt to [Rn+off]
PUSH {Rt} ; push 32-bit Rt onto stack
POP {Rd} ; pop 32-bit number from stack into Rd
ADR Rd, label ; set Rd equal to the address at label
MOV{S} Rd, <op2> ; set Rd equal to op2
MOV Rd, #im16 ; set Rd equal to im16, im16 is 0 to 65535
MVN{S} Rd, <op2> ; set Rd equal to ~op2

Branch instructions

B label ; branch to label Always
BEQ label ; branch if Z == 1 Equal
BNE label ; branch if Z == 0 Not equal
BCS label ; branch if C == 1 Higher or same, unsigned \geq
BHS label ; branch if C == 1 Higher or same, unsigned \geq
BCC label ; branch if C == 0 Lower, unsigned $<$
BLO label ; branch if C == 0 Lower, unsigned $<$
BMI label ; branch if N == 1 Negative
BPL label ; branch if N == 0 Positive or zero
BVS label ; branch if V == 1 Overflow
BVC label ; branch if V == 0 No overflow
BHI label ; branch if C==1 and Z==0 Higher, unsigned $>$
BLS label ; branch if C==0 or Z==1 Lower or same, unsigned \leq
BGE label ; branch if N == V Greater than or equal, signed \geq
BLT label ; branch if N != V Less than, signed $<$
BGT label ; branch if Z==0 and N==V Greater than, signed $>$
BLE label ; branch if Z==1 or N!=V Less than or equal, signed \leq
BX Rm ; branch indirect to location specified by Rm
BL label ; branch to subroutine at label, return address in LR
BLX Rm ; branch to subroutine indirect specified by Rm

Interrupt instructions

CPSIE I ; enable interrupts (I=0)
CPSID I ; disable interrupts (I=1)

Logical instructions

AND{S} {Rd,} Rn, <op2> ; Rd=Rn&op2 (op2 is 32 bits)
ORR{S} {Rd,} Rn, <op2> ; Rd=Rn|op2 (op2 is 32 bits)
EOR{S} {Rd,} Rn, <op2> ; Rd=Rn^op2 (op2 is 32 bits)
BIC{S} {Rd,} Rn, <op2> ; Rd=Rn&(~op2) (op2 is 32 bits)
ORN{S} {Rd,} Rn, <op2> ; Rd=Rn|(~op2) (op2 is 32 bits)
LSR{S} Rd, Rm, Rs ; logical shift right Rd=Rm>>Rs (unsigned)
LSR{S} Rd, Rm, #n ; logical shift right Rd=Rm>>n (unsigned)


```

ASR{S} Rd, Rm, Rs      ; arithmetic shift right Rd=Rm>>Rs (signed)
ASR{S} Rd, Rm, #n      ; arithmetic shift right Rd=Rm>>n (signed)
LSL{S} Rd, Rm, Rs      ; shift left Rd=Rm<<Rs (signed, unsigned)
LSL{S} Rd, Rm, #n      ; shift left Rd=Rm<<n (signed, unsigned)
    
```

Arithmetic instructions

```

ADD{S} {Rd,} Rn, <op2> ; Rd = Rn + op2
ADD{S} {Rd,} Rn, #im12 ; Rd = Rn + im12, im12 is 0 to 4095
SUB{S} {Rd,} Rn, <op2> ; Rd = Rn - op2
SUB{S} {Rd,} Rn, #im12 ; Rd = Rn - im12, im12 is 0 to 4095
RSB{S} {Rd,} Rn, <op2> ; Rd = op2 - Rn
RSB{S} {Rd,} Rn, #im12 ; Rd = im12 - Rn
CMP   Rn, <op2>         ; Rn - op2      sets the NZVC bits
CMN   Rn, <op2>         ; Rn - (-op2)   sets the NZVC bits
MUL{S} {Rd,} Rn, Rm     ; Rd = Rn * Rm   signed or unsigned
MLA   Rd, Rn, Rm, Ra    ; Rd = Ra + Rn*Rm signed or unsigned
MLS   Rd, Rn, Rm, Ra    ; Rd = Ra - Rn*Rm signed or unsigned
UDIV  {Rd,} Rn, Rm      ; Rd = Rn/Rm     unsigned
SDIV  {Rd,} Rn, Rm      ; Rd = Rn/Rm     signed
    
```

Notes Ra Rd Rm Rn Rt represent 32-bit registers

```



value  any 32-bit value: signed, unsigned, or address
{S}    if S is present, instruction will set condition codes
#im12  any value from 0 to 4095
#im16  any value from 0 to 65535
{Rd,}  if Rd is present Rd is destination, otherwise Rn
#n     any value from 0 to 31
#off   any value from -255 to 4095
label  any address within the ROM of the microcontroller
op2    the value generated by <op2>
    
```

Examples of flexible operand <op2> creating the 32-bit number. E.g., Rd = Rn+op2

```

ADD Rd, Rn, Rm          ; op2 = Rm
ADD Rd, Rn, Rm, LSL #n ; op2 = Rm<<n Rm is signed, unsigned
ADD Rd, Rn, Rm, LSR #n ; op2 = Rm>>n Rm is unsigned
ADD Rd, Rn, Rm, ASR #n ; op2 = Rm>>n Rm is signed
ADD Rd, Rn, #constant ; op2 = constant, where X and Y are hexadecimal digits:
    
```

- produced by shifting an 8-bit unsigned value left by any number of bits
- in the form 0x00XY00XY
- in the form 0xXY00XY00
- in the form 0xYXYXYXY

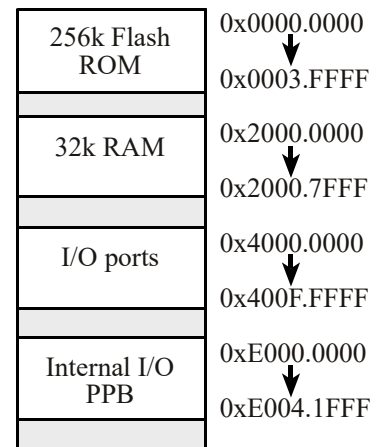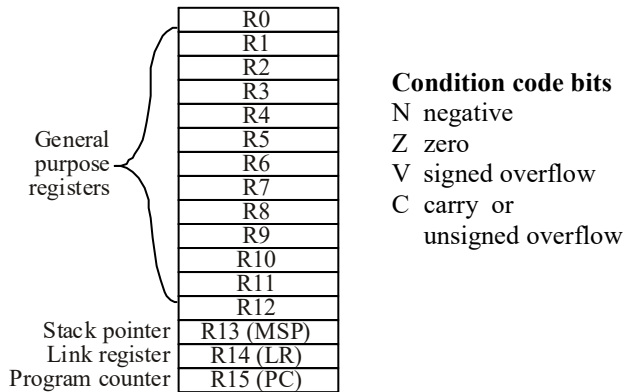

```

DCB 1,2,3 ; allocates three 8-bit byte(s)
DCW 1,2,3 ; allocates three 16-bit halfwords
DCD 1,2,3 ; allocates three 32-bit words
SPACE 4 ; reserves 4 bytes
    
```